

Example on an EoC system

For further information and updated manuals go to

[triaux.com/support](http://triaux.com/support)



# Quick Guide

## Controller, 32/64 EoC

Model		Item no.
Controller, 32 EoC EP, WiFi		383101
Controller, 64 EoC EP, WiFi		383103
Version	Date	EN
A	12/2017	EN

## How to install EoC Controller in an existing coax installation



Mount the Controller in 19" rack or on the wall with the brackets



Disconnect the output cable from the TV signal device (shown here with TV out from a headend)

Connect the cable to one of the EoC out 1-4 on the Controller

Note that each EoC output can support up to 16 endpoints



Mount a connection cable to connect your TV signal to the TV in port on the controller.




Connect your router or internet modem to the EoC controller with an ethernet patch cable.

If you use the default setup

- port 2 is for a private network
- port 3 is for guest network
- port 4 is for IP TV

## How to install EoC Controller in an existing coax installation

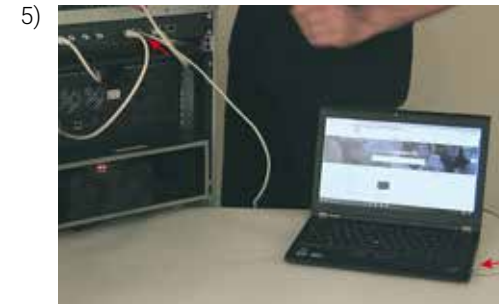

Connect your laptop to the EoC controller in ethernet port 1 with an ethernet patch cable



Open your browser  
Type in: <http://setup.eoc>



Just follow the 7 steps from the GUI to set up your EoC Controller



Now you are finished with the configuration > click Finish and you will see the System Status